STS® humidifier outdoor enclosure dimensions

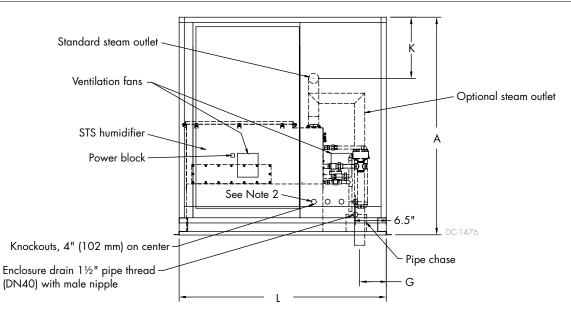


FIGURE 1-1: OUTDOOR ENCLOSURE WITH STANDARD OR OPTIONAL STEAM OUTLET, ELEVATION VIEW

Notes:

- 1. The Outdoor Enclosure has two available steam distribution configurations. The standard configuration has a steam outlet on the right side of the Outdoor Enclosure for connecting to steam dispersion unit piping. The optional internal steam distribution configuration routes steam within the Outdoor Enclosure and down through the enclosure pipe chase into a building.
- 2. There are four knockouts located on the right and left side of the enclosure. Knockout sizes are 1½" (hole dia. 50 mm) for STS models 25-100, and 2" (hole dia. 63.5 mm) for STS models 200-800. Run the electrical power into the enclosure at these knockouts.
- 3. All piping from the STS unit to the steam outlet is stainless steel pipe. Depending on the application, tubing or DriSteem steam hose is recommended for interconnecting piping from steam outlet to dispersion assembly.
- 4. Install a riser trap in the branch line leading to the humidifier.
- 5. The preferred location for the STS steam control valve is inside the Outdoor Enclosure. If one of these valves must be located inside the building, it must be located within 6' (1.8 m) of the humidifier to reduce pressure drop.
- 6. See the dimensions in Table 2-1.

STS humidifier dimensions

FIGURE 2-1: OUTDOOR ENCLOSURE, TOP VIEW

Valve access door:

• Models 25-100 have one access door

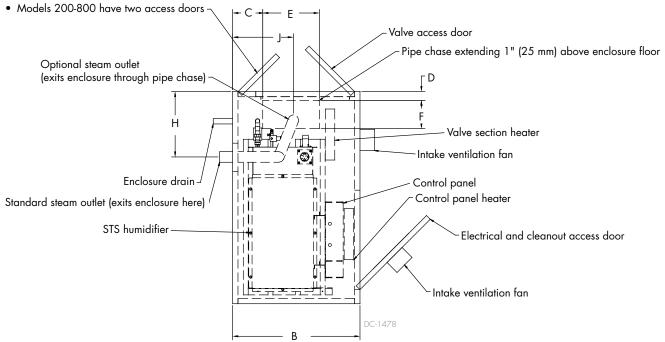


Table 2-1: Outdoor Enclosure dimensio

	Description	STS model			
ltem		25-100		200-800	
		inches	mm	inches	mm
А	Enclosure height	56.00	1422	66.00	1676
В	Enclosure width	36.00	914	46.00	1168
С	Pipe chase position	4.50	114	4.50	114
D		2.00	57	3.50	89
Е	Pipe chase size	20.00	508	32.00	312
F		8.00	203	10.00	254
G	- - Steam pipe position -	6.00	152	8.50	216
Н		18.63	473	22.00	559
J		14.50	368	20.50	521
К		12.25	311	11.00	279
L	Enclosure length	60.00	1524	78.00	1981

Table 2-2: STS Outdoor Enclosure electrical specifications					
	Voltage	Current	Maximum disconnect		
Outdoor Enclosure without heater package	120 Vac, 50/60 Hz	3.5 A	10 A		
Outdoor Enclosure with heater package	120 Vac, 50/60 Hz	13.5 A	20 A		

STS humidifier outlet sizes and types

Table 3-1: Outdoor Enclosure connection sizes					
.	STS model				
Description	25 – 100	200 - 800			
Water makeup (fill)	1/4" pipe thread (DN8)	1/4" pipe thread (DN8)			
Drain	3/4″ (DN20)	1″ (DN25)			
Condensate return	3/4" pipe thread (DN20)	3/4" pipe thread (DN20)			
Steam outlet	See Table 3-1.				

Table 3-2: Outdoor Enclosure weights

STS model	Shipping	weight*	Operating weight*		
515 model	lbs	kg	lbs	kg	
25	600	272	680	308	
50	625	284	840	381	
100	640	290	860	390	
200	1050	476	1650	748	
400	1125	510	1750	794	
800	1225	556	2250	1021	

Specifications:

- See your humidifier's catalog or installation, operation and maintenance manual for capacities and input requirements.
- Add 15 full load amps (120 VAC) when using an outdoor enclosure with a heater package.
- Add 2 full load amps (120 VAC) when using an outdoor enclosure without a heater package.

Includes humidifier

Table 3-3:

CTC	Hose size	Flange size				
STS model	2" (DN50)	3" (DN80)	4" (DN100)	5" (DN125)	6" (DN150)	
25	Х					
50	Х	Х				
100	Х	Х	Х			
200		Х	Х	Х	Х	
400		Х	Х	Х	Х	
800			Х	Х	Х	

Note: For pipe thread steam outlet options, see DriCalc, DriSteem's free sizing and selection software, available at www. dristeem.com.