

XTR

Electrode Steam Humidifier



XTR Electrode Steam Humidifier

- *Easy to operate*
- *Easy to maintain — just replace the cylinder*
- *Affordable to buy, economical to operate*
- *Disperse steam into ductwork or open spaces*

HUMIDIFY FOR HEALTH AND COMFORT

XTR ELECTRODE STEAM HUMIDIFIER

The DriSteem XTR electrode steam humidifier provides humidification for a wide range of buildings, including residential and light commercial applications.

DriSteem XTR humidifiers are ideal for finished spaces and applications where space is limited. Electrical and plumbing connections are easily accessible for hassle-free installation.



XTR ELECTRODE HUMIDIFIER

The XTR electrode humidifier uses heat caused by electrical resistance in conductive fill water to boil the water into steam. Automatic drain and fill cycles keep electrical current within demand parameters, based on water conditions and steam production.

WHY CHOOSE XTR ELECTRODE STEAM HUMIDIFIERS

AFFORDABLE TO BUY, ECONOMICAL TO OPERATE

- Low up-front cost and minimal maintenance make XTR one of the most affordable humidification systems to purchase and install.
- XTR works with tap or softened water with conductivity from 350 to 1250 $\mu\text{S}/\text{cm}$.

EASY TO OPERATE

- When the humidity level drops, the XTR electrode steam humidifier automatically makes steam.
- At the end of the humidification season, after the system has been idle for 72 hours, the humidifier drains automatically and remains in standby until the next humidification season.

EASY TO MAINTAIN - JUST REPLACE THE CYLINDER

- The XTR humidifier is easy to maintain. Just replace the steam cylinder when prompted.
- All water impurities and minerals remain in the cylinder, and there are no messy evaporator pads to replace or tanks to clean.

DISPERSE STEAM INTO DUCTWORK OR OPEN SPACES

- Disperse steam into existing heating ducts using steam hose and a dispersion tube connected to the humidifier.
- Steam exits the dispersion tube without dripping or spitting, preventing condensate from collecting in the duct.
- Quietly disperse steam into finished open space with the XTR steam blower mounted remotely or on top of the humidifier, or use the XTR fan pack, mounted in the wall.


XTR FAN PACK

XTR fan packs mount flush to the wall for use in finished spaces. They disperse steam into open spaces and are useful where there are no air-handling ducts.



Learn More

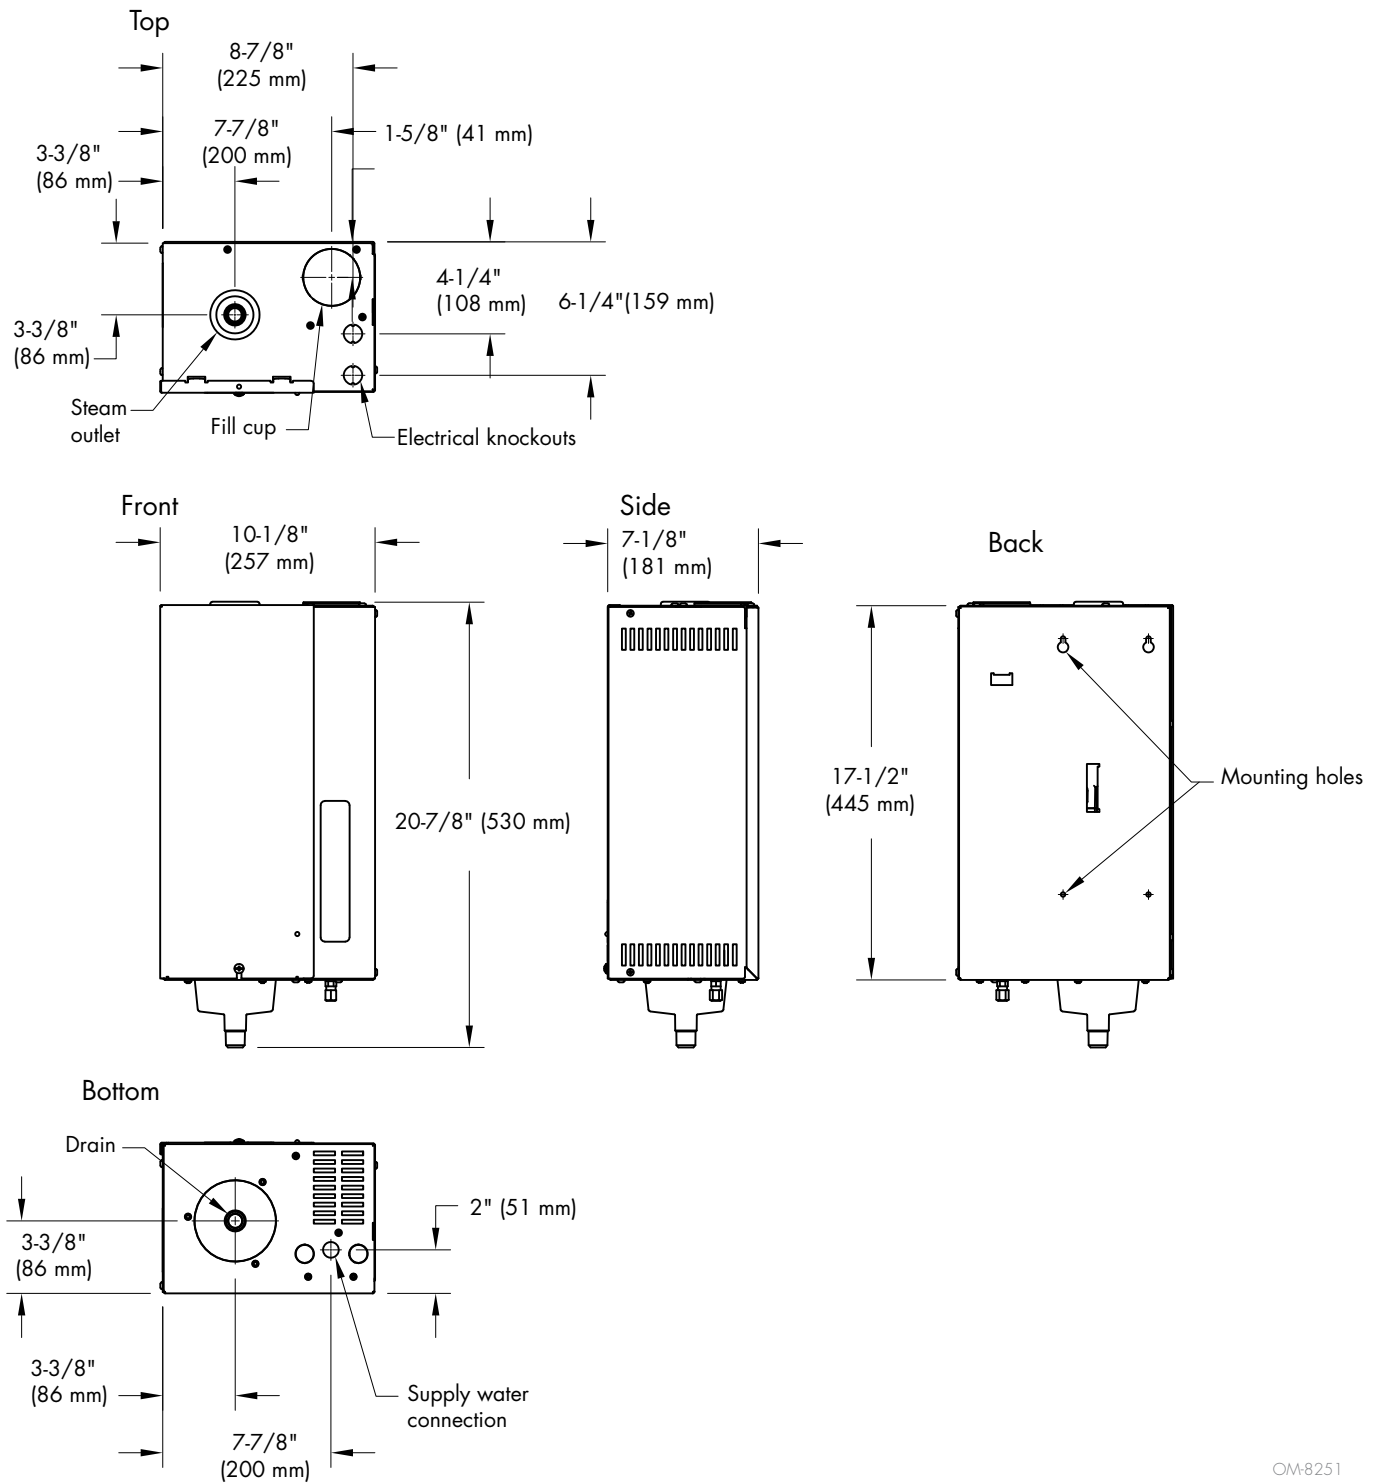

FIGURE 3-1: XTR HUMIDIFIER DIMENSIONS

OM-8251

SPECIFICATIONS

Capacity depends on the voltage connected to the humidifier. Power connection points are easily accessed.


Table 4-1:
XTR humidifier capacities and electrical specifications

Mode	Voltage	Input power	Nominal steam capacity		Nominal current draw	Maximum line current	Fuse
			lbs/hr	kg/h			
16 A	120V, 60 Hz	1.92 kW	5.6	2.5	16 A	19.2 A	25 A
	208V, 60 Hz	3.33 kW	9.9	4.5			
	230V, 50 Hz	3.68 kW	10.8	4.9			
	240V, 60 Hz	3.84 kW	11.3	5.1			
The XTR humidifier can be configured to operate in a current limited mode if lower maximum operating capacity is desired.							
11.5 A	120V, 60 Hz	1.38 kW	4.0	1.8	11.5 A	13.8 A	25 A
	208V, 60 Hz	2.39 kW	7.1	3.2			
	230V, 50 Hz	2.65 kW	7.8	3.5			
	240V, 60 Hz	2.76 kW	8.1	3.6			

Table 4-2:
XTR humidifier weights and dimensions

Shipping weight		Maximum operating weight		Dimensions					
				Width		Height		Depth	
lbs	kg	lbs	kg	inches	mm	inches	mm	inches	mm
27.0	12.2	23.0	10.4	10-1/8	257	20-7/8	530	7-1/8	181


FIGURE 5-1: XTR STEAM BLOWER DIMENSIONS

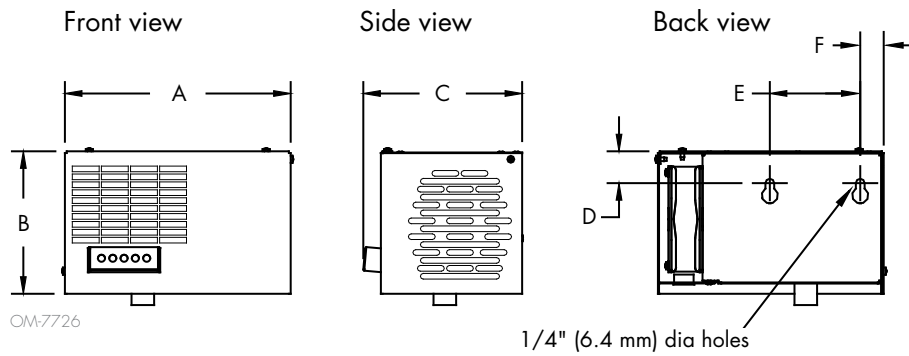

**Table 5-1:
XTR steam blower dimensions**

Dimension	inches	mm
A	10	254
B	6-1/4	159
C	7	178
D	1-3/8	35
E	4	102
F	1	25

FIGURE 5-2: XTR FAN PACK DIMENSIONS

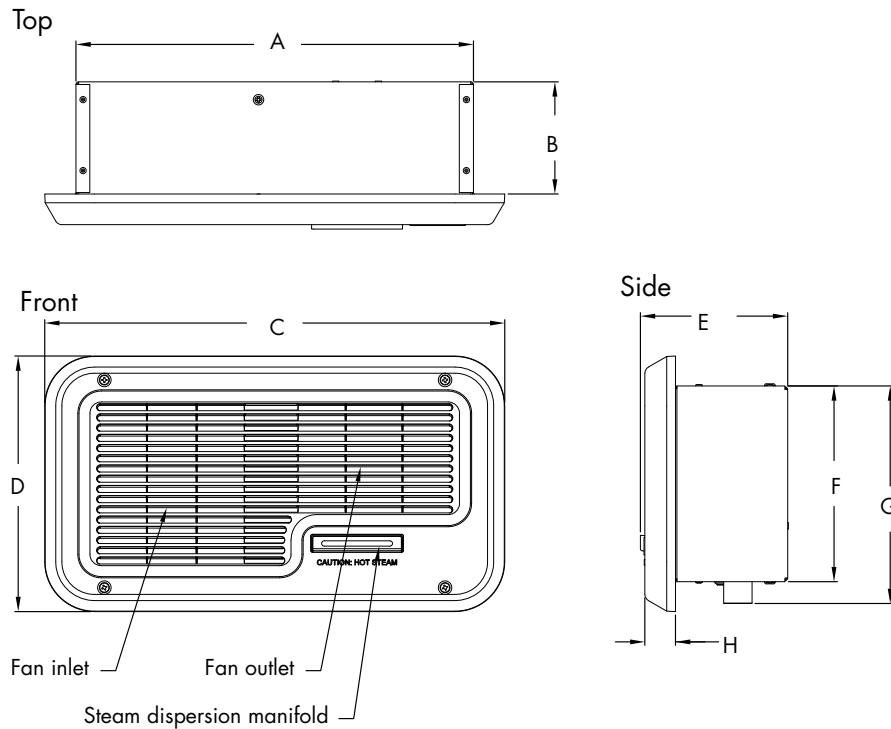

**Table 5-2:
XTR fan pack dimensions**

Dimension	inches	mm
A	14	356
B	3-15/16	100
C	16-3/16	411
D	9	229
E	5-3/16	132
F	6-7/8	175
G	7-11/16	195
H	1-1/16	27

**Table 5-3:
XTR fan pack specifications**


Fan pack model	Shipping weight		Operating weight		Sound dBA
	lbs	kg	lbs	kg	
SDU-003FP	10.4	4.7	8.4	3.8	50

Notes:

- Input voltage: 24 VAC, supplied by XTR humidifier.
- Fan pack ships separately from humidifier.

90-2193

XTR HUMIDIFIER CONTROL PANEL

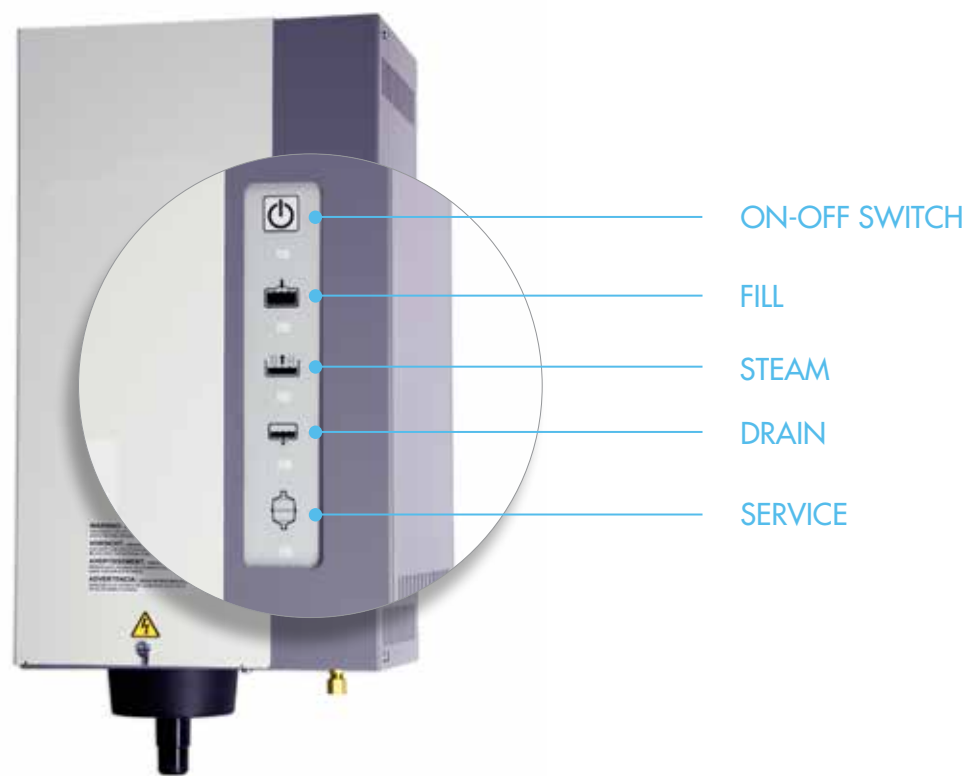


EASY OPERATION

The XTR humidifier features push-button operation, with indicator lights for operating status and troubleshooting information.


AUTOMATIC CONTROL

DriSteem’s algorithm monitors the conductivity of water in the steam cylinder and automatically manages drain and fill events to optimize humidifier performance and steam output.

XTR HUMIDIFIER CONTROL PANEL

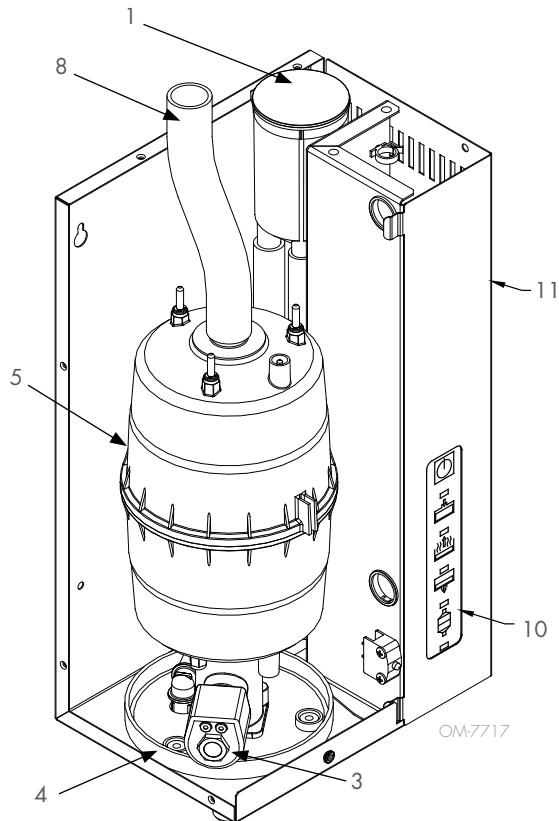

XTR HUMIDIFIER CONTROL PANEL

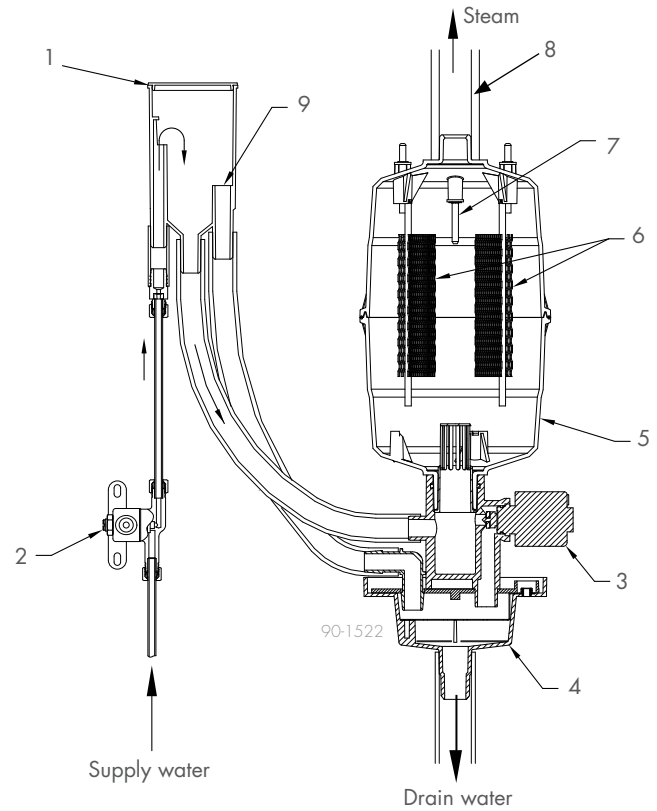

- 1. FILL CUP**
Accepts supply water from fill valve.
- 2. FILL VALVE**
Controls flow of supply water to fill cup.
- 3. DRAIN VALVE**
Drain valve opens to allow water from cylinder into drain cup.
- 4. DRAIN CUP**
Accepts drain water from cylinder and overflow from fill cup.
- 5. STEAM CYLINDER**
Where water boils and steam is produced. Indicator on control panel prompts user when time to replace steam cylinder.
- 6. ELECTRODES**
Electrical current between electrodes heats water into steam.
- 7. HIGH WATER SENSOR**
Filling stops if water reaches high water sensor.
- 8. STEAM OUTLET**
Steam generated in steam cylinder rises through steam outlet and travels to dispersion assembly through steam hose or tubing.
- 9. OVERFLOW**
Overflow to drain prevents fill cup from overfilling.
- 10. CONTROL PANEL**
Controller in cabinet controls all humidifier functions. See the control panel description above.
- 11. PAINTED, REMOVABLE COVERS**
Painted covers are easily removable for service.

HUMIDIFY FOR HEALTH AND COMFORT



THE VALUE ADD OF HUMIDITY

IMPROVE INDOOR AIR QUALITY

- Keeping RH levels within a range of 40 to 60 decreases bacteria and viruses in the air and hinders the development of fungi, mites, chemical interactions, and ozone production.
- The result is reduced occurrences of allergic rhinitis, respiratory infections, and asthma among building occupants.

REDUCE PROBLEMS ASSOCIATED WITH STATIC ELECTRICITY

- Along with enhancing health and improving comfort, humidity in the air harmlessly dissipates static electricity. Static charges give shocks, attract dust to surfaces, and cause static cling in apparel and draperies.
- Maintaining RH levels within a range of 30 to 60 percent will significantly reduce problems associated with static electricity.


PRESERVE MATERIALS AND FURNISHINGS

- Many building materials, finishes, and furnishings are hygroscopic — they absorb, retain, and release moisture.
- Low RH levels cause expensive damage to building interiors because as hygroscopic materials dry, they shrink. This can create gaps in wallpaper seams, floor boards, and furniture joints, and it can damage historic and artistic artifacts.
- Fluctuating RH levels can also cause damage. Maintain a consistent RH level to keep the moisture content of hygroscopic materials in equilibrium with their surrounding environments.

IMPROVE COMFORT

- Also hygroscopic in nature, the human body gives up its moisture to dry air. As our body's moisture migrates (evaporates) to areas of low RH, we become cooled, just as when we perspire.
- Raising the RH level in a room slows the evaporation rate and will make the room feel warmer. This allows dropping the dry-bulb temperature without a loss in comfort, offsetting humidification energy costs.

Source: E.M. Sterlina study

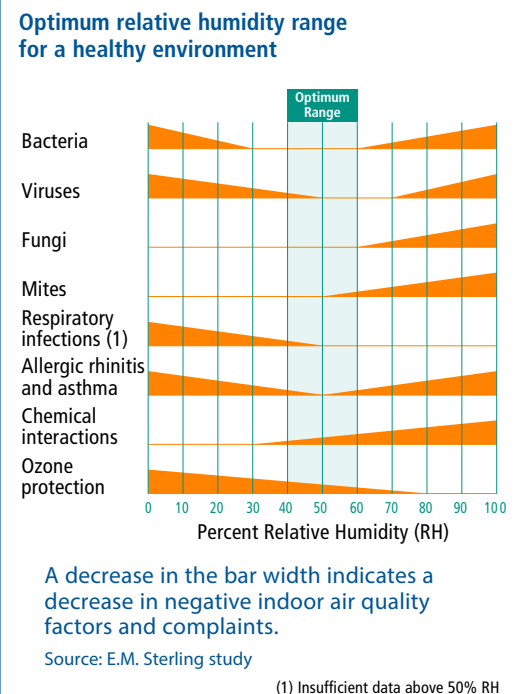



DRI-STEEM Corporation

a subsidiary of Research Products Corporation
DriSteem U.S. operations are ISO 9001:2015
certified

U.S. Headquarters:
14949 Technology Drive
Eden Prairie, MN 55344
800-328-4447 or 952-949-2415
952-229-3200 (fax)

Continuous product improvement is a policy
of DriSteem; therefore, product features and
specifications are subject to change without
notice.

DriSteem is registered trademarks of Research
Products Corporation and are filed for trademark
registration in Canada and the European
community.

Product and corporate names used in this
document may be trademarks or registered
trademarks. They are used for explanation only
without intent to infringe.

© 2024 Research Products Corporation



Form No. XTR-BRO-EN-2024-0324

EXPECT QUALITY FROM THE INDUSTRY

LEADER

Since 1965, DriSteem has been leading
the industry with creative and reliable
humidification solutions. Our focus on ease of
ownership is evident in the construction of the
XTR humidifier. DriSteem leads the industry
with a Two-year Limited Warranty and optional
extended warranty.

For more information
www.dristeem.com
sales@dristeem.com

For the most recent product information visit
our website:
www.dristeem.com