




## Installation instructions for alert light

1. Remove the wire access cover.
2. Remove + - A B and VENT DEH terminal blocks.
3. Plug the 4-terminal block connected to the alert light in to the + - A B terminals. **Note:** If a Model D-77 is also using the + - A B terminals, it will need to be wired into the new Alert Light terminal block.
4. Plug the 2-terminal block connected to the alert light in to the DEH terminals.
5. Replace the wire access cover.

**FIGURE 1-1: ALERT LIGHT WIRING**

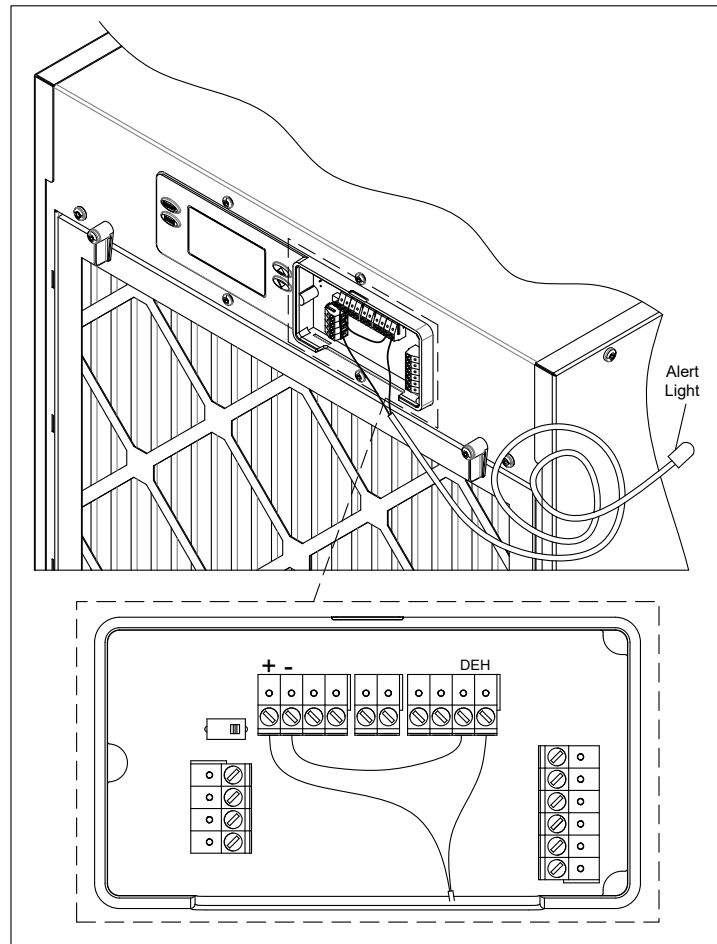

90-2494

© 2023 Research Products Corporation  
Form No. CDS-ALERT-INSTRUCTIONS-0123  
Part No. 890000-278 REV A  
10016904